

Protect-O-matic Notes

Features

The lower edge uses a larger reinforcing tab to prevent movement in the writing/keyboard area, and Tab-1 that fits in the slot under the frame to the left helps to prevent any shifting or vertical movement.

Media

I used Apollo Transparency Film for Plain Paper Copiers, (UPC 7-18575-09022-6) but any transparency sheets should do.

Usage

These seem to be extremely durable. I have used mine for 2 weeks now and cannot see any scratches at all on the transparency.

Margins

One note about the format. To fit 9 per sheet, the graphics extend beyond the lower margin of some inkjet printers. (usually .5 inch) In this case you may wish to use a previous template to mark the points below this margin with either a pushpin or marker by cutting out a transparency, and overlaying it against the 3 on the lower edge.

Printing

Also, do not check "FIT TO PAGE" when printing, or the protectors will be scaled down when printed and will not fit. (this setting is in an options sub-menu prior to Adobe Acrobat 4)

I hope this helps...it's worked really well for me, is crystal-clear, without air bubbles or adhesive to work with.

Let me know how these have worked for you, and send me your favorite software link to say Hi :)

Casioluvver on
NeoDyne@webmail.bellsouth.net


Copyright 2000 NeoDyne/Jaz - All Right Reserved - For Non-commercial use only




1 After cutting the protector out, start by sliding Tab-1 into the notch under the left-lower screen frame... (The outline is very exact, so try cutting on, or just to the inside of the outline. If the protector is not flat, trim to fit.)



2 Once Tab-1 is installed bend the protector slightly outward to slip Tab-2 under the lower edge,

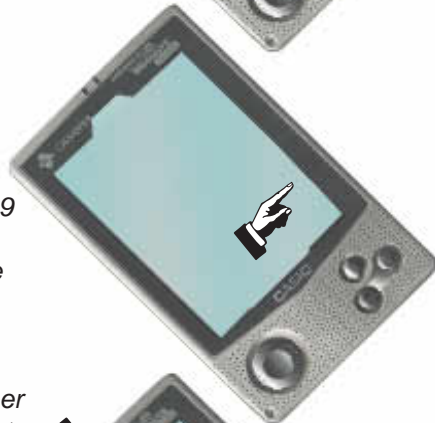

3 While sliding Tab-2 under the lower edge, flex the Right Edge, Tab-3 down under the right edge of the frame.

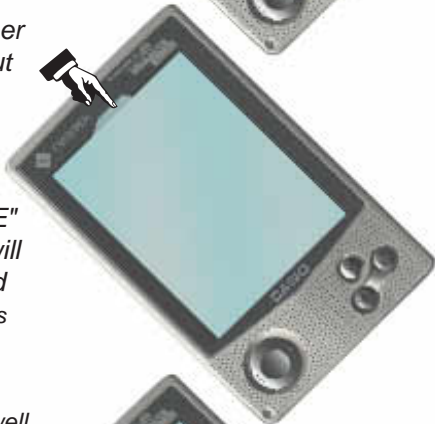

4 Use your fingernail to push back on the Top Tab so it bends toward the screen and the top edge of the frame...It should slip under and anchor in place.




5 Push the protector out toward the left and right edges to firmly position it in place.

Flatten from the lower edge up for best results.

When installed, this screen protector prevents any dust or dirt from getting on the screen, and will not move at all while writing.

To change the protector, flex it with your thumb from Right to Left, to bow it slightly upward, then lift to remove.

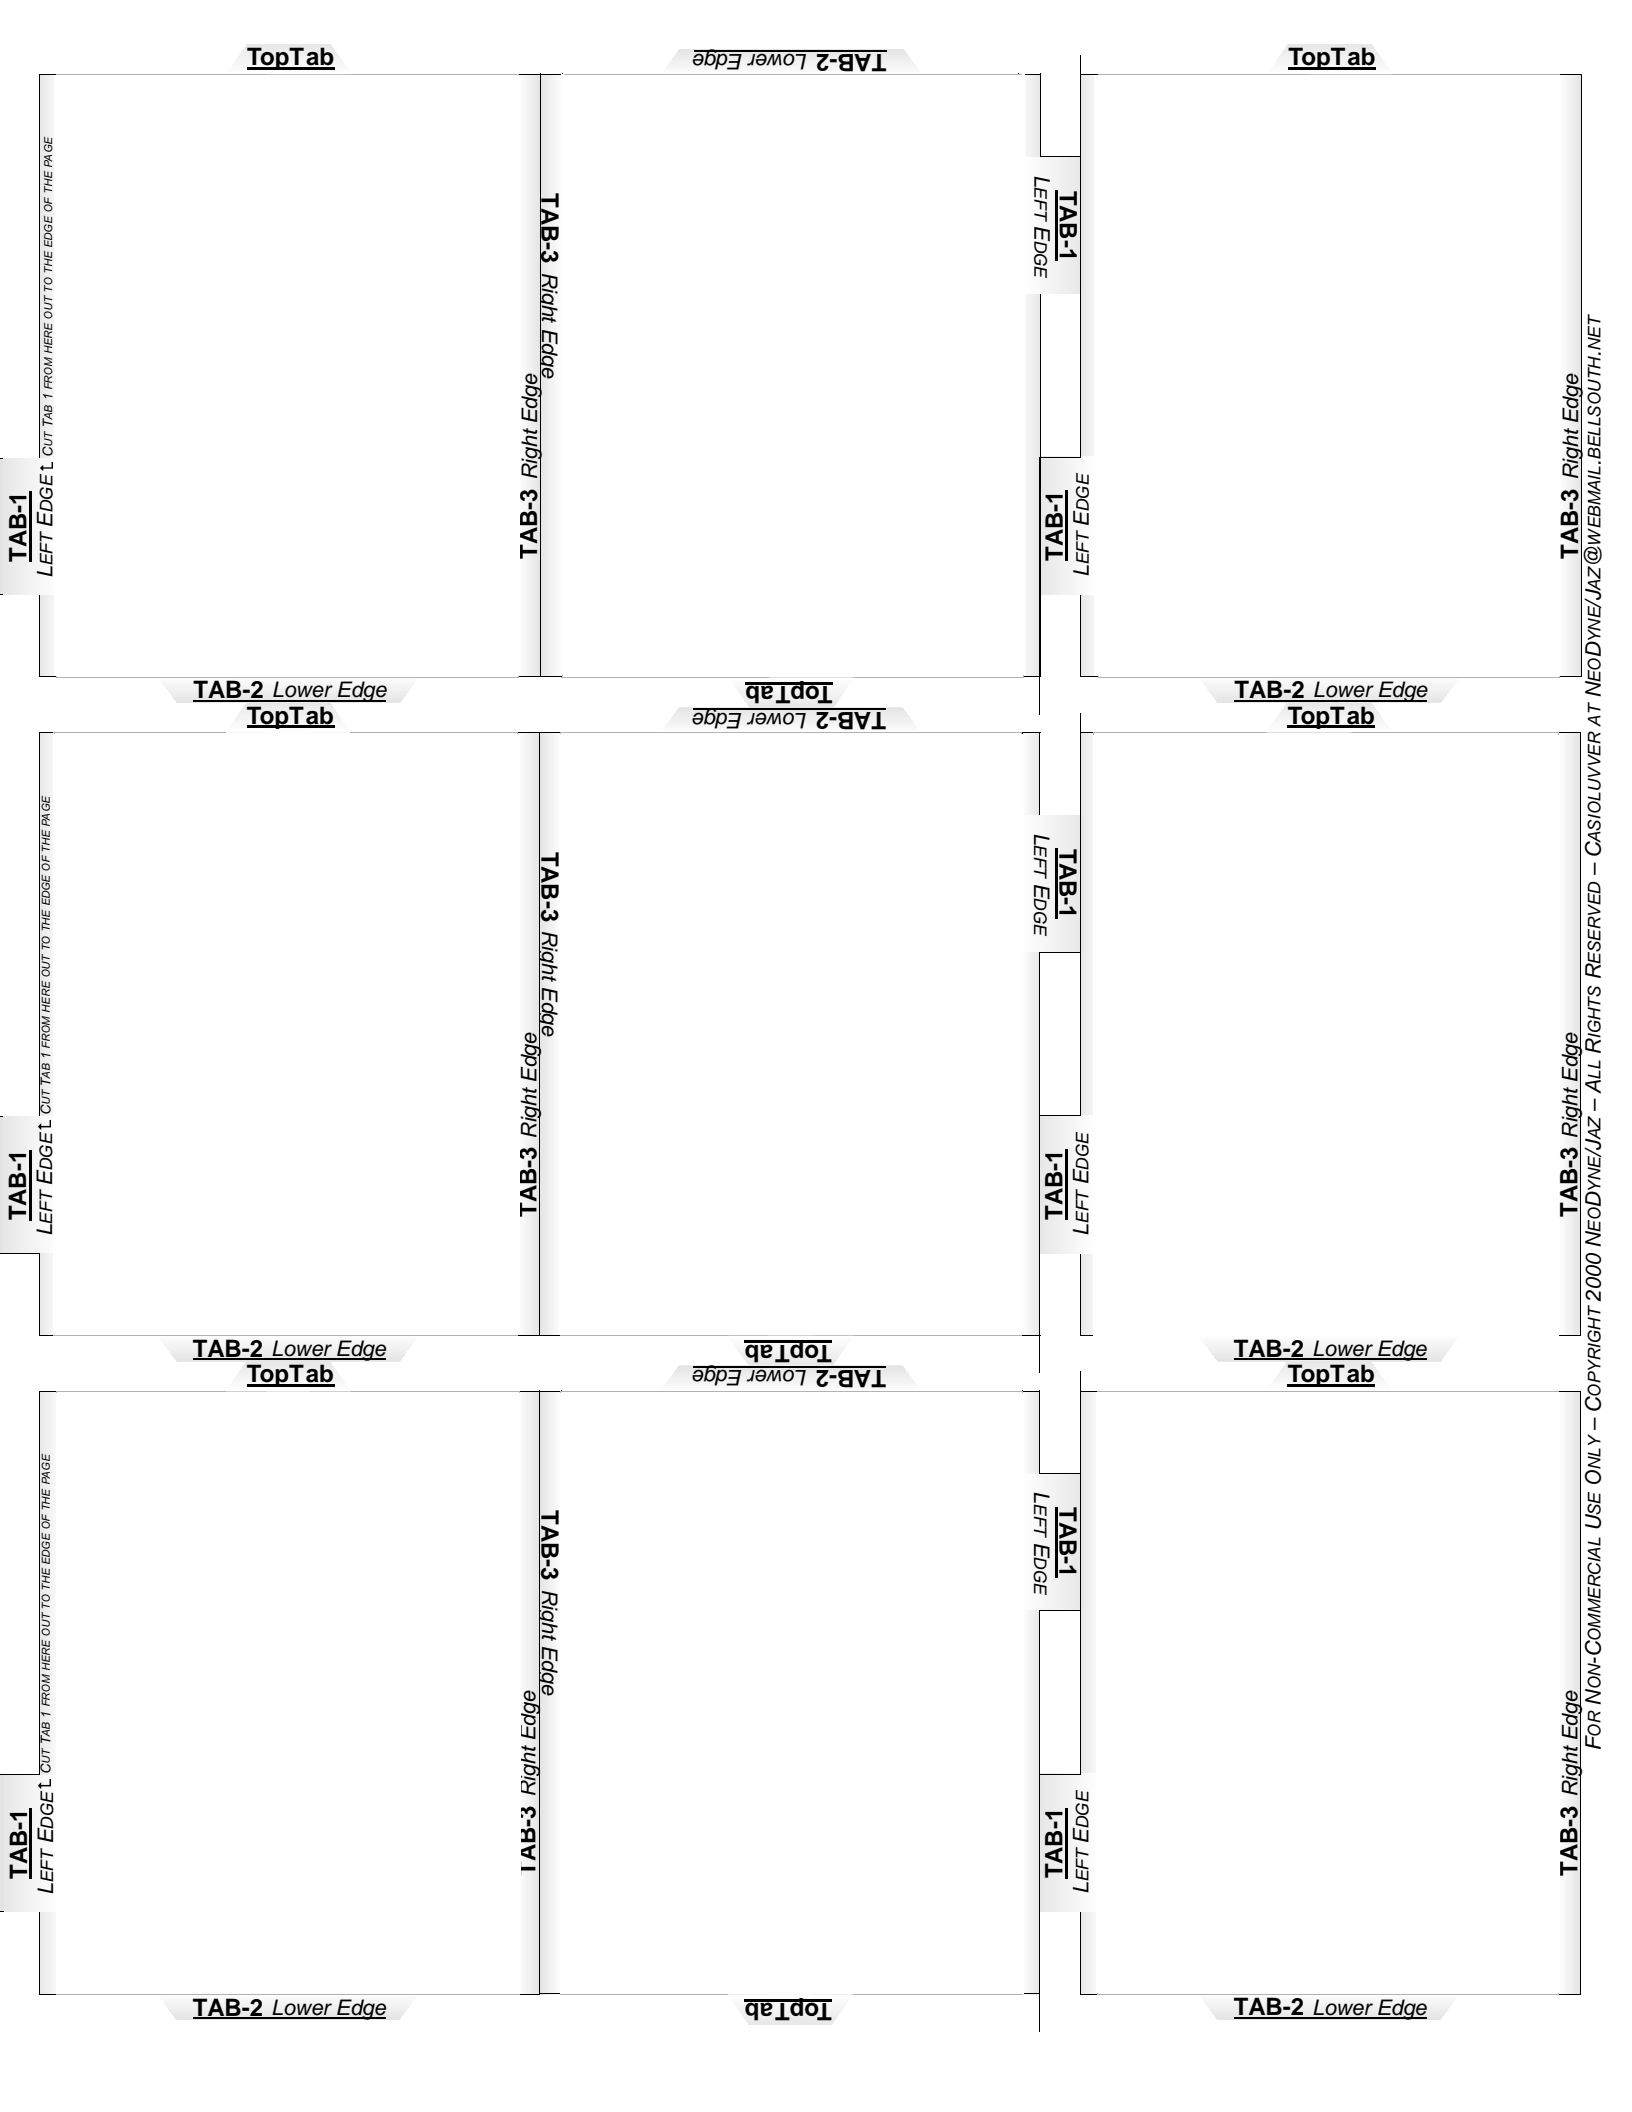

TAB-1

LEFT EDGE CUT TAB 1 FROM HERE OUT TO THE EDGE OF THE PAGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-1

LEFT EDGE

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-1

Left Edge

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TopTab

TAB-2

Lower Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge

TAB-3

Right Edge